



Jet-Pro[®] SofStretch[™]

Hot-Peel Inkjet Transfer Paper


version 1.4.2

Hand Iron Instructions:


1. Preheat iron to linen setting. Do not use steam. (Empty all water.)
2. Iron on a very smooth hard surface that is waist level or below. Do not use an ironing board. Place a pillowcase on the surface and iron the pillowcase to remove any wrinkles.
3. Put the garment on the center of the pillowcase and iron it to remove wrinkles.
4. Place the transfer with the image side down in the center of the garment.
5. Hand ironing is recommended only for T-shirts and light-weight fabrics and image sizes A4 and smaller.

Full Sheet Transfer

1. Using 2 hands, firmly slide the iron up and down as shown in the diagram. In 90 seconds, make enough passes to completely iron the shirt 2 times. The iron should be halfway off the edge when the edges are ironed.

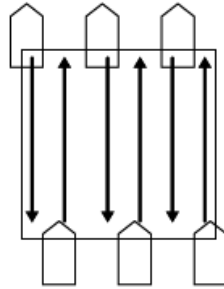

2. Using 2 hands, firmly slide the iron side to side as shown in the diagram. In 90 seconds, make enough passes to completely iron the shirt 2 times including all edges. The iron should be halfway off the edge when the edges are ironed.

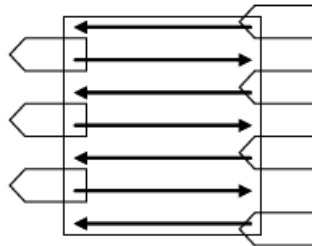

3. For smaller transfer one-half sheet or less, the ironing time is reduced to 1.5 minutes total. If transfer area is smaller than the iron, iron for 30 seconds with heavy pressure.

Paper Removal (Cold Peel)

Allow transfer to cool for approximately 2 minutes and remove paper.

Trim smoothly around graphic before applying.

Washing Instructions;

Turn garment inside out and wash in cold water using a mild detergent. Do not use bleach.

Dry on low heat setting. Do not iron directly on the transferred area.